 




Internet Radio Tuner with CD player

A 2734A

User Manual



Please read this user manual carefully before using the receiver


Distributed in Australia by Altronic Distributors Pty. Ltd.

altronics.com.au (08) 9428 2199

Contents


- Location of Controls4
- Rack Installation5
- Remote control6
- Entering password for your wireless network7
 - 1. To start up9
 - 2. Network Setup10
 - 3. Overview of features and functions12
 - 4. Internet Radio13
 - 5. Media Centre16
 - 6. USB Playback17
 - 7. DAB+/DAB Radio18
 - 8. FM Radio19
 - 9. BT playback20
 - 10. Alarm Setting21
 - 11. Timer Setting22
 - 12. Sleep Timer Setting22
 - 13. Podcasts operation23
 - 14. Configuration24
 - 15. Web browser control via PC / Smart phone
 - Tuning internet radio & manage favourite30
 - 16. Trouble Shooting33
- Helpful Tips36
- Technical Specification37

Front Panel

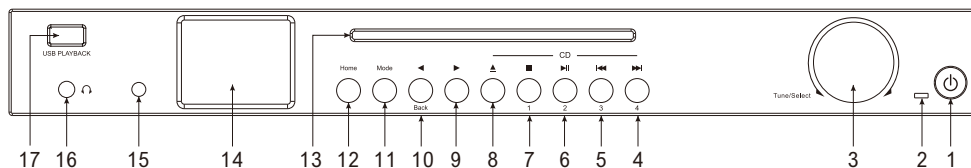

1. Press to enter/exit from Standby mode
2. **Power LED**
Lit when DC-in has power
3. **Tune/Select**
Rotate to navigate menu
Rotate to adjust volume of headphone
Press to select an item
4. **▶▶ Skip to the next track of CD / Preset button 4**
Dedicated Preset button No.1-4
Press and hold to preset 4 dedicated stations. Press briefly to recall to play. These are independent presets and will not appear on the "My Favorite" list.
5. **◀◀ : Skip to the previous track of CD / Preset button 3**
6. **⏸: Pause/Play of CD / Preset button 2**
7. **■ : Stopping playback of CD / Preset button 1**
8. **▲ : Eject CD**
9. **▶ (FORWARD)**
Press to cycle through the display option in radio playing mode / Enter edit menu in Favourite list / cursor right
10. **◀ / BACK**
Press to exit to previous menu / delete entry of character's input/ cursor left
11. **Mode**
Switching between radio modes
12. **Home**
Press to display Home screen to view different radio modes / setting options
13. **CD Player (Slot-loading)**
14. **2.4" TFT colour display**
15. **IR sensor**
Receives Infra red signal from remote control
16. **Headphone jack**
3.5 mm Headphone output with volume controlled by dial (for the line output volume control, please refer to the Line/Digital out setting on p27)
17. **USB Playback**
Play audios from USB thumb drive

Rear Panel

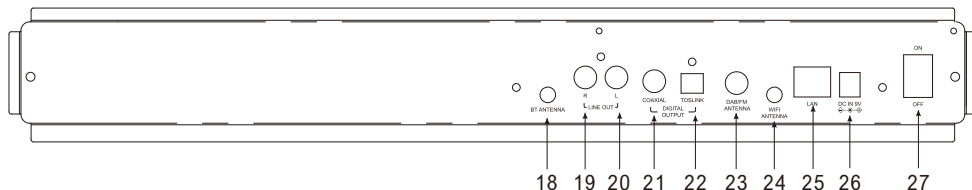

18. BT Antenna connector

Connect the BT antenna before pairing with your BT device

19. Line out - R

20. Line out - L

21. Digital out - Coaxial

22. Digital out – Optical

23. DAB/FM antenna

24. WiFi antenna connector

Connect the WiFi antenna before setting up the Tuner

25. Ethernet (LAN) connector

26. DC-IN Jack


27. Power On/Off switch

Rack Installation

This unit can be installed into a rack (483 mm /19”) by means of the supplied mounting brackets. Screw on the two mounting brackets at the left and right sides of the housing. The device requires 1 unit and can be fixed with four screws M6 in the rack. When mounting the unit into the rack, please make sure that there is enough space around the device for ventilation. Steady overheating will damage your device.

Remote control

1.  : Mute
2. **0-9**: Input index number on the list / input characters for WiFi security code
3.  : Preset the current playing station to Favorite
4.  : Cursor up
5.  /  : Cursor left / back to previous menu
6.  : Alarm button
7.  : Sleep Timer
8. **Mode**: Switch between various radio modes
9.  : Home
10.  : Previous station on the list / previous track on BT / USB / Media Centre / CD
11.  : Access network info of the radio unit
12.  : Press to toggle between Standby and Operation
13.  : Recall the favorite list
14. **OK**: confirm button
15.  : Cursor right
16.  : Cursor down
17. **Vol+**: Volume up
18. **Vol-**: Volume down
19. **EQ**: Equalizer
20.  : Next station on the list/next track on BT / USB / Media Centre / CD
21.  : Play/pause for BT / USB / Media Centre / CD
Play/stop for Internet radio
22. **Dimmer**: Access the Dimmer menu to adjust the brightness of the display
23. **Info**: Toggle to cycle through the station's info, the big clock display or return to now playing screen

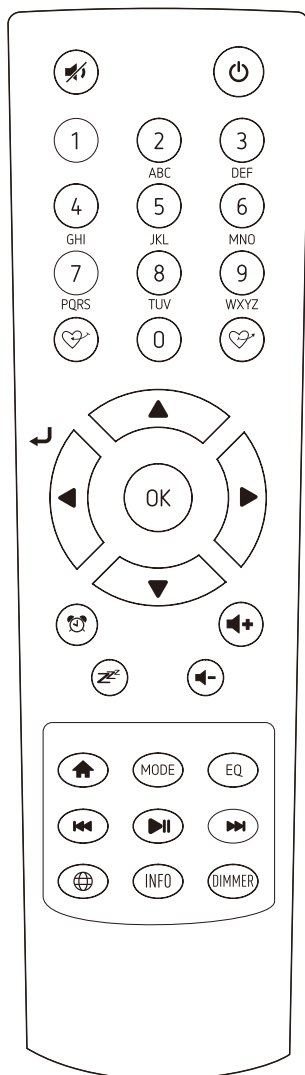

Entering password for your wireless network

Using Remote control

On the alpha-numeric keypad, press the button repeatedly to cycle through the characters assigned to each button (see the list below). Press [OK] to input the next one.

Button 1: 1 !@#\$%^&*()_+[]{};:'"\|,./<>?

Button 2: 2ABCAbc

Button 3: 3DEFdef

Button 4: 4GHIghi

Button 5: 5JKLjkl

Button 6: 6MNOnmo

Button 7: 7PQRSpqrs

Button 8: 8TUVtuv

Button 9: 9WXYZwxyz

Button 0: 0

Alternatively, use the ▲ and ▼ button to select the character, press [OK] to input the next one. When done, move the cursor to the ✓ mark, and press OK to confirm.

Enter passphrase

0	1	2	3	4	5	6	7	8	9	a	✓
A	b	B	c	C	d	D	e	E	f	F	✗
g	G	h	H	i	I	j	J	k	K	l	🗑️
L	m	M	n	N	o	O	p	P	q	Q	
r	R	s	S	t	T	u	U	v	V	w	
W	x	X	y	Y	z	Z	<	/	=	>	

When the entries are done, move the cursor to this mark and press OK to confirm.

Using control buttons on the radio unit

Rotate the [Tune/Select] knob to scroll through the characters, highlight it and push the [Tune/Select] knob to input the next one. When done, scroll to the ✓ mark and push the [Tune/Select] knob to complete the entry.

Note: The password is case sensitive.

Before you start

Please ensure the following is ready:

You have a broadband internet connection.

A wireless broadband router is connected to the internet successfully. The radio supports Wireless B, G and N connection (Wireless N router can also be used with the setting on B or G).

You know the Wired Equivalent Privacy (WEP) or Wi-Fi Protected Access (WPA) data encryption code/password. You need to key in the correct code when the radio is connected to the wireless router for network connection. If you do not know the code/password, please contact the person /technician who set up the router/network for you.

The radio can work via Wireless network connection (Wi-Fi connection) and Wired connection (Ethernet RJ45).

Precautions

- The radio should not be used in a high temperature or high humidity environment over prolonged periods of time as this may damage the unit.
- Keep the radio away from liquids as it may get damaged. Please switch off the radio immediately if water or liquids is spilled into the radio. Consult with the shop you bought this radio for any question.
- Avoid using or storing the unit in dusty or sandy environment.
- Do not open and repair the radio by yourself.
- Use only the DC adaptor supplied with the radio. Connecting a power supply with a different rating will cause permanent damage to the radio and may be hazardous.
- Clean only with dry cloth.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD,
DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE RADIO BACK. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE RADIO.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THIS RADIO.

1. To start up

- Remove internet radio tuner (called Tuner hereafter) from the package box. There are two external antennas included in the accessories. Both are identical. Connect them to the connectors at the back of the Tuner, labelled with BT Antenna and WiFi antenna respectively. Without the antennas installed, the WiFi and BT function do not work properly.
- Plug in the DC adapter and switch the Power on/off switch (on the rear cabinet) to ON. The Tuner will turn on automatically.

Caution: Use only the adaptor supplied with the radio. Connecting a power supply with a different rating will cause permanent damage to the radio and may be hazardous.

- The Tuner is intended to connect with external powered speaker. It does not have amplifier and speaker driver built-in. Please connect your stereo through the Analogue output or Digital output located on the rear panel of the Tuner for listening.

2. Network Setup

Internet connection can be setup via Wireless LAN (WiFi).

Your Tuner requires a broadband Internet connection through wired Ethernet or WiFi. The easiest way is use a CAT 5 or CAT 6 cable to connect through wired Ethernet to a Wifi router, which connects to a internet modem or router provided by your ISP.

Wired LAN (Ethernet)


For Wired Ethernet connection to a router with DHCP enabled, the network configuration for Internet connection is automatically done and the radio can be used for Internet radio and UPnP sharing without user interaction.

When the network is connected, the Ethernet icon left  will appear on the top corner.


Wireless LAN (Wi-Fi)

Connect the Wi-Fi antenna to the connector at the back side of the tuner.

Setting up the radio for the first time will prompt you to select a language and the time zone. Next, configure the network following the wizard, choose Yes to start. Rotate the **[TUNE/SELECT]** knob to highlight Yes and press **[TUNE/SELECT]** to confirm.

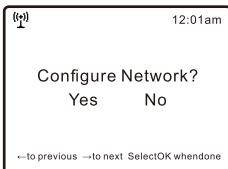

Select Wireless Network and choose Add wireless network from the list, use the **[TUNE/SELECT]** knob to scroll and press it to confirm, then choose “Scan & select”:

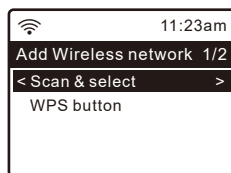


- It will start scanning the available wireless networks around. Scroll to your network and confirm the selection. If your wireless network has a security code protected, it will ask you to enter the passphrase/password. Please refer to the above section 'Entering password for your wireless network' on P7.

Note: The password is case sensitive. Please consult with your system administrator if you don't know the password.

2. Network Setup

Alternatively, WPS connection is available if your router has a WPS button (Configuration > Network > Wireless Network > Add wireless network > WPS button).

- When the Wi-Fi connection is successful, the Association Complete will be shown briefly. The wifi signal bar will appear on the top left corner of the display:

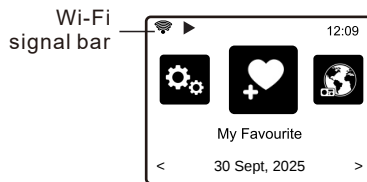

3. Features and functions

Press [**HOME**] to enter the Home screen or the  on the remote control. Scroll by rotating the [**TUNE/SELECT**] knob or the [**◀ / ▶**] button on remote:

My Favorite — To show the list of favorite stations which have been assigned to the presets. There are up to 150 presets available.

Internet Radio — Start exploring the worldwide radio stations and music here.

Media Centre — You can browse and stream music from your network via UPnP or DLNA Compatible devices.

USB — USB playback, to play audio from USB thumb drive.

CD Player — Plays CD MP3

DAB+/DAB Radio — Pick up DAB+ and DAB radio signal if available in your local area (no internet connection required).

FM Radio — Receive ordinary FM radio stations in your local area (no internet connection required).

BT streaming — BT playback, to play audio stream (receive) from another BT enabled device after pairing/connected each other.

Alarm — Alarm clock. Two alarm settings available.

Timer — To count down from a specified time with alarm.


Sleep Timer — Enable the timer to turn the radio in standby after the selected time elapsed.

Configuration — More options/settings available to personalize as you desire.


Podcasts — Explore a wide range of podcast programs from around the world.

Clock style

Set the clock display in Digital or Analog as you like. Under Configuration> Date & Time > Set clock style.

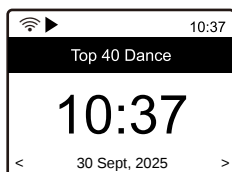


Digital style

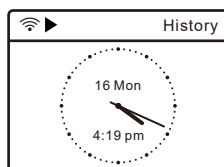

Analog style

4. Internet Radio

On the Home screen, choose Internet Radio and you will find the options below:

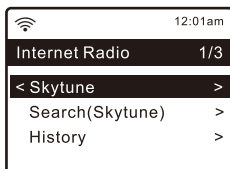

Skytune

Select Skytune to start enjoying thousands of radio stations over the world. You can filter your search by Region, Music genre and talks.

The **Local Radio** let you access quickly the stations available in your local area through internet connection.



Note — You can change the Local Radio area under **Configuration> Local radio** setup. Please refer to section 12 for the details.

Note — When you scroll along the list of **Globe All** and want to quickly reach to a certain point of the long list, input the index number on the remote control to quickly jump to that point. For example, on the remote control, input 2 8 and press OK, it will highlight the station no. 28.

Search

Instead of browsing the radio station list, you can input a few characters of the desired station to filter out / short list the stations.

History

The radio memorizes the stations you have listened up to 99 stations.

If you have listened more than 99 stations, it will supersede the first station that you have listened.




Start playing internet radio

When a radio station starts playing, more station information can be displayed. Press the **[INFO]** button in the state of the playback screen below:



4. Internet Radio

Every time you press the **[INFO]** button, it will cycle through information at a time such as the streaming bit rate, name of the song, artist name (if available), the big time clock and the radio's station logo (if available) or return to now playing screen:

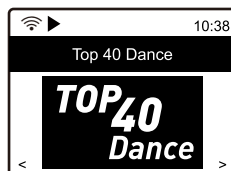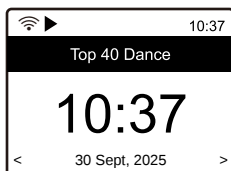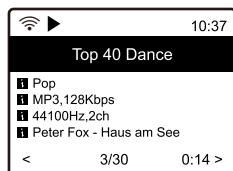

Press **[HOME]** to return home screen. To go back to the playback screen, press the **[HOME]** button again.


My Favorite

This is to show the list of your Favorite stations which have been assigned to the presets.

Preset a station

When a radio station is playing, press the  button on the remote control, you will see the  icon appears as below. It means the station is added to the Favorite list.

Preset icon

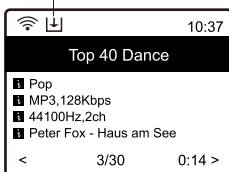

The new added station will always show in the last item on the Favorite list. You can store up to 150 presets.

Recall a station

Press the  button on the remote control to recall the list of My favorite, or navigate to My Favourite on the Home screen and select it to confirm.

Dedicated Preset button #1-4

Program the 4 preset button to access the stations you play it most of time. Press and hold the 1-4 button on the Tuner to preset, press it briefly to recall.


Note: The 4 dedicated preset stations do not appear on the "My Favorite" list. To replace it with another station, play the station you want to replace

4. Internet Radio

with, then press and hold the preset number button on the Tuner.


Create new categories - make your own favorite list

There are two items in the My Favorite list as below, "All Favorites" and "Uncategorized":

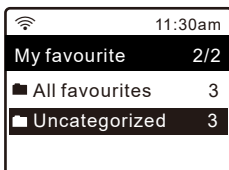

You can create new categories of your favorites and name it as you like, e.g., "Morning mix", "My Jazz", "After work"...etc to manage your favorites.


In the page of "My Favorite", press the [►] button, it will enter the edit menu with "Create Category" as below:

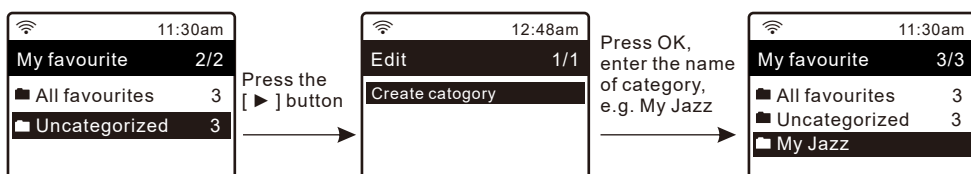

When a category is created (can create more categories as you like), you can now assign the stations to the category as desired. The "Uncategorized" means the stations which are not assigned to any categories yet.

To move the stations to the respective category, enter either the "All Favorites" or "Uncategorized" folder, choose the station from the list, press the [►] button and select "move to category", then highlight the category to move it to and press OK to confirm.

You can always move the station from one category to the other.

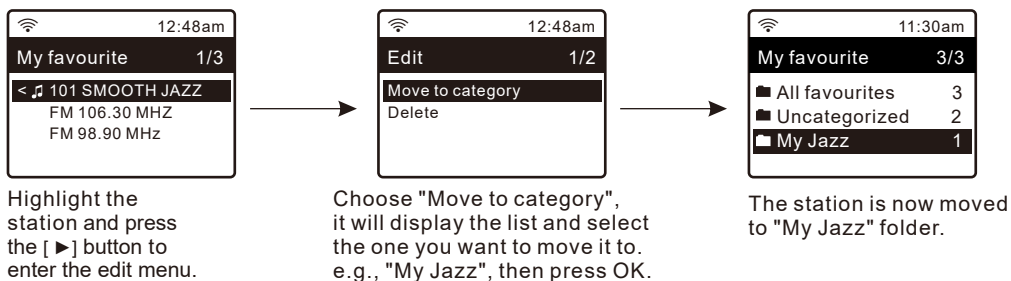

5. Media Centre

The device supports UPnP and is DLNA-compatible.

This provides the opportunity to stream music from your network. However, this requires you to have a compatible device in your network that can function as a server. This can be e.g., a network hard drive or a conventional PC with e.g., Windows via which access to the shared folder or media sharing is permitted. The folders can then be browsed and played on the Tuner.

Note — Please make sure your computer laptop is on the same Wi-Fi network as the Radio before you start using this function.

Music streaming

- Once the UPnP/DLNA compatible server is configured to share media files with your radio, you can start music streaming.
- On the main menu, select **Media Centre** and choose **UPnP**.
- It may take a few seconds for the radio to complete the scan for available UPnP servers. If no UPnP servers are found, it will show **Empty List**.
- After a successful scan is done, select your UPnP server.
- The radio will show the media categories available from the UPnP server, e.g. 'Music', 'Playlists' etc.
- Choose the media files that you wish to play.
You can set the mode of playback under **Configuration > Playback setup**.

My Playlist

You can make your own playlist for the UPnP music files. Choose and highlight the song you want to add to playlist, press the  button on remote, until the sign  appears. The song will be added to **My playlist**.

Clear My Playlist

Remove all songs in "My Playlist" to allow a new playlist to be prepared.

Note — If you have DLNA compatible servers available, follow the steps described above to browse the audio files from DLNA compatible device on the Tuner to play.

6. USB Playback

Another option to listen to your favorite music is via the USB thumb drive. Insert the USB drive to the USB port on the Tuner. Press the Home button and navigate to "USB" and confirm the selection. It will take a moment to read the USB drive before it starts playing the music. To skip the next or previous track by remote control, press the [⏮ / ⏭] buttons. On the Tuner, press the [⏪] button returning to the file list.

To pause/play the music, press in the [**TUNE/SELECT**] knob on the Tuner or  on the remote control.

Note:

If a USB thumb drive is not recognized, the list of files on the drive is corrupted or a file in the list is not played, please connect the USB drive to a PC, format the device and try again. The supported file system is FAT16 and FAT32.

A USB drive requires high power (more than 500mA or 5V) is not supported.
Compatible audio format: MP3, AAC, AAC+

NTFS and logical drive partitioning are NOT supported.

USB hard drive, HDD or similar are NOT supported.


7. DAB+ Radio (Digital Audio Broadcasting)

If there is Digital Audio Broadcasting (DAB) in your area, the Tuner can pick up the DAB stations as well (no internet connection is required). The Tuner supports both DAB and DAB+.

Connect the wire antenna (supplied in the box) to the antenna jack on the rear cabinet. Place the Tuner close to the window and extend the antenna as far as it can go to get the best reception.

On the Home screen (main menu), scroll to **DAB Radio** or use the **[MODE]** button on the remote to switch to DAB Radio and confirm the selection.

Choose **DAB full scan** to confirm scanning if this is the first time using the DAB radio. Confirm to start scanning and it will show the progress on the number of channels received. When it is done, a preset page will be displayed for your action.

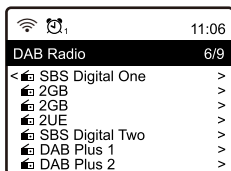

You can select the channel and start listening to it. Whenever you want to add to My Favourite, press the  button on the remote, it will add to the favourite list.

Always press the **[⏮ / ⏭]** button on the remote to skip to previous or next preset. Press the **[⏪]** button to return to the Preset list.

Note — When a DAB radio is playing, press the **[INFO]** button to view more radio information, each time you press the **[INFO]** button, it will display various information at a time such as radio frequency, rolling texts (if available) and big time clock.

New digital radio stations should be picked up automatically by the Tuner if they are part of a multiplex you already received. Otherwise you need to do the DAB full scan again.


8. FM Radio

To receive the ordinary FM stations (no internet connection is required), connect the wire antenna (supplied in the box) to the antenna jack on the rear cabinet first.

Place the Tuner close to the window and extend the antenna as far as it can go to get the best reception.

On the Home screen (main menu), scroll to FM Radio or use the **[MODE]** button on remote to switch to FM Radio. Press **[OK]** to start.

Choose **FM full scan** to confirm scanning if this is the first time using the FM radio. When it is done, it will automatically save the found channels on presets and display the list for your action.

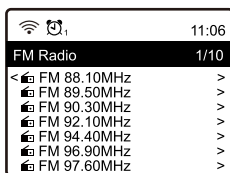


You can select the channel and start listening to it. Whenever you want to add to **My Favourite**, press the  button on the remote and it will add to the favourite list. Press the **[◀]** button to return to preset list.

Note — When it is playing FM radio, press the **[INFO]** button to view more radio information, each time you press the **[INFO]** button, it will display various information at a time such as radio frequency and clock display.

Manual Tune

To manual tune the frequency, long press **[TUNE/SELECT]** on the unit, until you see the "Tuning" appeared on the display at the bottom right corner. Use the **[◀/▶]** button to tune the frequency. When done, long press the **[TUNE/SELECT]** knob to exit manual tune.

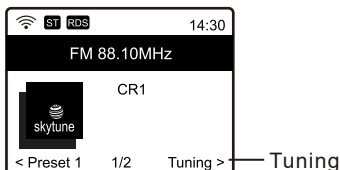

Using the remote control to fine-tune the frequency, press the **[◀▶]** buttons and the frequency will begin advancing or receding, when done, add it to the Favorite.

9. BT playback

Before transmission between your BT device and the radio is possible, both devices must be coupled. This process is called "pairing". The Tuner is served as a receiver, to receive music stream to play on the Tuner. Check the BT antenna has already installed.

If you have already coupled to a BT device before, this connection will be restored automatically when both devices are in range and BT operation has been selected on the radio. "Pairing" does not have to be repeated. This function may need to be activated in your BT device.

- Push the [**HOME**] button to display the selection menu for the different operating modes.
- Use the up / down button to select the operating mode BT and push the dial switch.
- Switch your BT device to which you want to connect the radio on and activate the pairing mode here. The device scans for BT devices in the reception range.
- When the radio is found, your BT device shows its name A2734A-XXXX (the XXXX is an identification code for your radio unit).
- Select the radio at your BT device.
- Start playback on your BT device.
- Playback now takes place.

10. Alarm Setting

- Choose **Alarm** from the main menu or press the  button on the remote control.
- Select either Alarm 1 or Alarm 2, choose **Turn on** to activate the Alarm.
- Follow the alarm wizard instructions to set the alarm.
- The wizard will guide you through the settings below:
 - Time** — Set the time for the alarm

Sound — You can choose **Wake to Tone, My Favourite, Wake to FM Radio or Wake to DAB Radio** as the alarm source.

Note — Wake to FM or Wake to DAB Radio - only the preset stations can be used for the radio alarm (if the preset scan has been completed).

Wake to My Favourite — Please preset your favorite station before setting this as the alarm source.

 The Presets in Preset button 1-4 cannot be selected direct as the alarm source. If you want those 4 presets to become one of the alarm sounds, add these stations to the "My Favorite" list by press and hold the [**FAV**] button or the [] button on remote.

Repeat — You can schedule the alarm as you desire -Everyday, Once or multiple days.

Alarm Volume — Adjust the volume of the alarm as you like by rotating the [**TUNE/SELECT**] knob or [**▲/▼**] button on remote.

Alarm duration — Set the duration of the alarm from the preset options ranging from 30 to 180 minutes. The radio will be turned to standby when the selected duration of time is due.

- After the above settings are completed, press the [**◀**] button to exit and make sure the Alarm is turned on. You will see the Alarm icon appeared on the display if it is activated.

11. Timer Alarm Setting


Setting the Timer Alarm

The device offers a Timer alarm function. The time will count down from a specified time and ends with a beeping sound. Timer settings is up to 99 hours, 59 minutes, 59 seconds.

The beeping sound volume and sound duration is adjustable from the Timer settings in Configuration menu.

Switching off the timer

When the alarm sounds, you can turn it off by pressing the **[TUNE/SELECT]** knob on the radio device or **[OK]** button on the remote control.

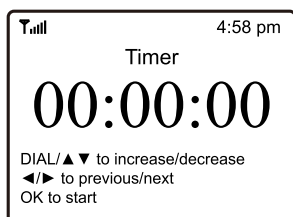


12. Sleep Timer Setting

You can set the timer to let the radio goes to sleep after the selected timer elapsed. There are number of preset timer options from 15 minutes to 180 minutes.

Press **[zzz]** button on the remote control to set the timer.

You will see the icon appeared on the display if the timer is set.

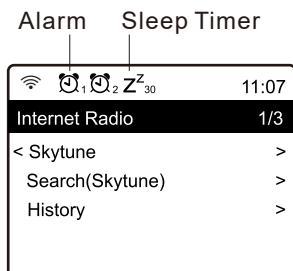

13. Podcasts operation

On the Home screen, select "Podcasts" and press OK to confirm. You will find the following options:

Listen again — You can always add a particular episode to "Listen again" to repeat on listening or continue the unfinished part.

To save the episode to "Listen again", press the Preset button  on the remote when it's playing. It will be added to the list. To remove it from Listen again, highlight the episode and press the right arrow button  to edit.

Note: The episode will resume to play from where it left off.

Subscribed — Subscribe your favourite Podcast for easy access to listen to the latest episode.

To subscribe a Podcast, highlight the Podcast and press the right arrow button , then select Subscribe.

To remove the subscription, highlight the podcast and press the right arrow button  to edit.

History — the previous listened episode of the podcasts.

Browse — To browse the list of Podcasts available

Search — Search the Podcast by keywords

Search history — the list of previous search records.

Using remote control to operate more functions. When an episode is playing, you can always skip forward / backward by "press and hold" the [ / ] buttons, press these buttons briefly [ / ] will skip to next / previous episode.

Press the  to pause the playback.

14. Configuration

Here you will find the complete settings / options available to configure your own tuner. On the main menu, navigate to Configuration setting. Press OK and you will see a list of options available.

Network

• Wireless Network

» Add wireless network

Scan & select — It will scan out a list of wireless networks around.

WPS button— Choose this option to connect your Wi-Fi router via WPS if the router has a WPS button.

» Remove wireless network

If you have already set up a network and want to remove it, choose this option.

Note — Always bring the Tuner within 2 meters of the Wi-Fi router for setup.

» AP: []

If you have added more than one network on the radio and want to switch to another one, select this option to change.

» Signal

This is to show the strength of the wifi Signal of the wifi router as received by the radio. Usually signal levels lower than -70dBm is at weaker level and if it affects the reception of your radio, you may need to optimize the router location or check any problem of the router itself.

» IP

The IP is set Dynamic by default. Select to change Fixed IP according to your network condition.

» DNS

The DNS is set Dynamic by default. Select to change <Fixed> DNS according to your network condition.

• LAN network

WiFi router using CAT 5 or CAT 6 cable. If your Router or Wi-Fi router is DHCP-enabled (recommended), you don't have anything to setup and the radio will connect to Internet with the parameters automatically assigned by the Router/Wi-Fi router.

Use the remote control for configuration if you want to use a fixed IP, scroll to IP:[Dynamic] and press OK. Choose Fixed. Press the ▲ button, you can then enter the IP, press ▲, ▼ to tune to the required numbers:

14. Configuration

xxx.xxx.xxx.xxx. Switch among the 4 groups by pressing ◀/▶ . When done, press OK. Scroll to GW and NM to do the same.

You can also choose to use a DNS server other than the one from the DHCP server. Scroll to DNS and do the same.

Note – Use DHCP to get the network parameters unless you are familiar with network setup.

- **Network auto on/off**

Always on: The WLAN function remains switched on (faster access when switching from DAB or FM mode to Internet radio).

Auto off in 15s/30s: The WLAN function shuts down after 15s/30 seconds when not in use (to save energy).

- **Wireless Channels**

Not all of the Wireless channels are available in every country. There may be variation between different countries. Therefore it is necessary to choose the Wireless channels to ensure the Wi-Fi performs satisfactory.

We have already set the channels according to the requirement in different countries. Choose the country you are staying from the list to get the correct channel.

- **Network connection test**

In case there are any issues in connecting Skytune, select this option to check out any failed items of the network parameters for further diagnosis.

Date and Time

- **Set date & time**

Enter date and time manually by selecting this option.

- **Time zone**

Set the time zone to synchronize the time automatically to the network time.

Coupled with the "set time from network" and "DST (Daylight time saving) will be adjusted automatically if you choose to use network time.

- **Set Time Format**

Choose either 12-hour or 24-hour notation you prefer.

14. Configuration

- **Set clock style**

You can choose the clock display in digital form or Analog style. The selected style will apply in Standby as well as the big clock display in radio playback.

- **Set Date Format**

- **DST (Daylight Saving Time)**

Enable on/off

- **Set time from network**

This is designed to synchronize a device's clock with a time server. Choose "On" will synchronize the time with the server by default every time it powers up and connects to Internet. You can change to use other time server by inputting the URL address (see below Network time server).

- **Network time server**

This is the time server being used for the radio to synchronize the device's clock. If you want to use another timer server, select this option and enter the URL.

- **Set time from DAB**

Choose to synchronize the time with the DAB broadcasts. The accuracy depends on the broadcasting station, and may vary by station.

- **Set time from FM**

Choose to synchronize the time with the FM broadcasts. The accuracy depends on the broadcasting station, and may vary by station.

Language

You can choose other languages as preferred. Scroll with the ▲ ▼ buttons on remote or [TUNE/SELECT] knob to the item with  and press OK. Scroll to highlight and select your choice of language by a press of OK button. Multiple languages are available.

DAB set up

- **DAB full scan**

You can always carry out a new scanning of DAB channels by selecting this option. All current presets and channels will be erased.

- **DAB station status**

This is to show the number of stations and signal received of each DAB frequency.

- **DAB station list**

The scanned DAB stations will be listed here for management. You can

14. Configuration

move the position or even delete any station. Scroll to the station and press [►] button. A pop up window will be presented: Move up, Move down and Delete.

FM Setup

• Scan setting

Either "All stations" or "strong stations" (with stronger signal) can be selected for the scan.

• Audio setting

If the signal is weak and stable stereo reception is not possible, select "Forced Mono" to get better reception.

• FM full scan

You can always carry out a new scanning of FM channels by selecting this option. All current presets and channels will be erased. The radio at the lowest frequency of the scanned values will be highlighted. The preset list will be saved unless a new preset scan is carried out.

• FM station list

You can adjust the preset ranking by Move down, Move up or Delete it. Highlight one of the preset and press the [►] button (or [►] on the unit), it will enter into the Edit menu.

Always press the [◀] button (or [◀•Back] on the unit) to return to the Preset list.

Local Radio

The region of the Local radio is set by default. Follow the steps below to change the region:

- Highlight the Local Radio and press OK.
- Choose Manual-set Local radio to change the region setting.

Playback Setup

This is to set the mode of playback under UPnP/DLNA compatible streaming: Repeat All, Repeat Once or Shuffle.

Power-On Options

This is to select the state of the radio after a power reset / power cut, or the next power up from Standby. There are 3 options available:

- Go to Standby
- Resume once ready: the radio will resume playing the last listened station.

14. Configuration

— Ready to use: the radio will stay in Home screen without action.

Auto Power Save

The radio will automatically turn to Standby/sleep after certain time of no signal/ not playing. There are several timer selections available.

Dimmer

You can set the backlight level for the display as you prefer.

There are two settings: Mode and Level

• Mode — Normal or Power Saving

Normal — the display will stay with the same level of brightness all the time without dim down.

Dim — the display will dim down after 20 seconds if no operation is made on the radio.

• Level — Bright and Dim

Bright — This is to adjust the level of brightness in Normal mode.

Dim — This is to adjust the level of brightness in Dim mode.

• Dimmer in Standby

The highest backlight level in standby is set by system default. To further reduce the backlight or turn it completely off, adjust it by turning **[TUNE/SELECT]** knob anti-clockwise on the tuner or press the ▼ button on remote. Increasing the backlight beyond the system level will illuminate for 20 seconds and then dim to default setting automatically.

EQ(Equaliser)

Various music genres can be set.

Buffer Time

Sometimes you may experience uneven playback of the internet radio. This can happen if the internet connection is slow or network congestion occurs. To help improving the situation, you can choose longer buffer time to get a few seconds of radio stream before beginning to play.

The default value is 2 seconds. You can choose 5/10 seconds if you prefer to have a longer buffering time.

14. Configuration

Line/Digital out

The volume control on the Tuner can only adjust the volume from the headphone. If you would like to control the volume over the external speakers as well, choose this option and select "Follow headphone". The volume adjustment will apply on both the headphone and the external speakers the same time.

Timer

This is to set the alarm sound volume and the duration for the Timer function.

Network information

View the network signal and other parameters. To access quickly to this information, press the [] button on the remote control.

When you use your PC to manage the My favorite stations, you have to use the IP address and you can view this info from here. Then type in the IP address (Configuration > Network Information > IP) to your PC's browser input window.

System information

The model number, system MID and software version (App version) can be found here.

Software Update

There may be software release to upgrade features of the radio from time to time. Check the update regularly to keep your radio up to date with the latest software.


Reset to Default

You can do the reset to clear all the settings and return to default settings. **Please note all the Station presets, Settings and configuration will be erased after you have performed the Reset.

15. Web browser control via PC / Smart phone – Tuning internet radio & manage favourite

Experience an easy way to control tuning internet radio channels and manage your favourite list via PC or Smart phone's web browser. The supported browsers are Internet Explorer and Chrome. Have the radio stayed on Internet radio mode when using this feature.

- Connect your PC or Smart phone to the same Wi-Fi network as your radio.
- Visit www.skytune.net
- On the home page, click “Browse/Search”

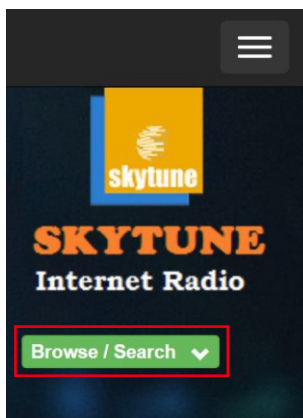

- Browse or enter the name to search the radio channel, a list of internet radio channels will be displayed.
- Click the “♥” symbol

Result for Searching 'dance'



1.fm 90's
Dance



1.fm Dance
One



101.RU - Club
Dance



101.RU -
Russian Dance



15. Web browser control via PC / Smart phone — Tuning internet radio & manage favourite

- It will prompt you whether to "Add Favourite" or "Listen to Station". Enter the IP address of your radio (e.g. 192.168.1.11):

Add Favourite / Listen to Station

Which operation do you want to apply to the station ?

1.fm Dance One

☒ Add station to my radio device favourite

☐ Listen to station on my radio device

Please enter your radio device's IP below.

192 . 168 . 1 . 11

Send

Close

The IP address can be located on the radio unit as follow:



* On the remote control, press the [] button, scroll to IP to view the IP address

* On the radio, return to the Home menu. Navigate to **Configuration > Network Information > IP**

- Select "Listen to Station", click "Send" and the radio unit will switch playing the channel and the "My Favourite" page will pop up on the web browser.

You can then choose to add the playing station to favourite or manage your list by other edit options. Any changes will synchronize to the radio unit immediately.

15. Web browser control via PC / Smart phone — Tuning internet radio & manage favourite

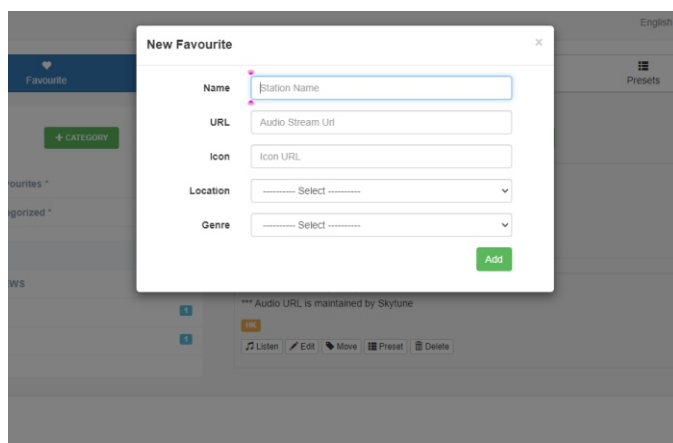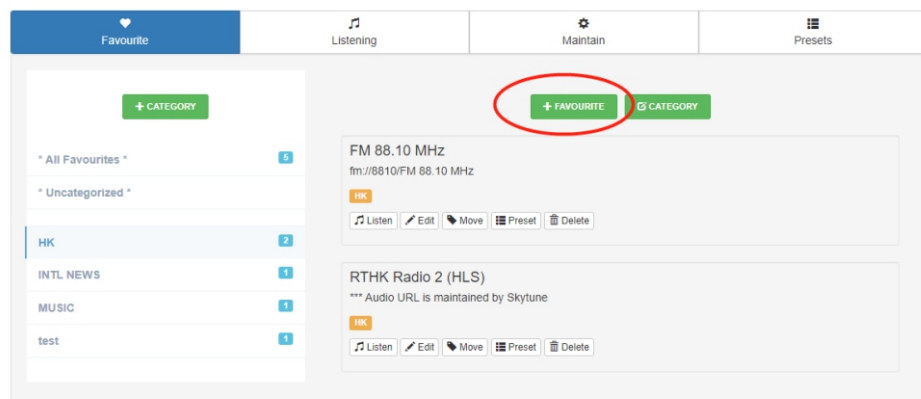

You can also add the radio channel if you know the published audio stream URL with the streaming format as follow:

1. Audio formats: MP3, AAC, AAC+
2. Stream formats: Shoutcast, Icecast (HTTP, HTTPS) and HLS
3. Playlist formats: PLS, M3U
4. Sampling frequency: 44.1 KHz and 48 KHz

16. Trouble Shooting

Problem	Cause	Solutions
Cannot connect to Wi-Fi network	Network down	• Confirm that a Wi-Fi or Ethernet Wired connected PC can access the internet (i.e. can browse the web) using the same network. • Check that a DHCP server is available, or that you have configured a static IP address on the radio. • Check that you firewall is not blocking any outgoing ports. As a minimum the radio needs access to UDP and TCP ports 80,443 and 8008, DNS port 53.
	Router restricts access to listed MAC addresses	Obtain the MAC address from Configuration > Information > Network > Wi-Fi MAC and add to the allowed equipment list on your access point. Note: The radio has separate MAC addresses for wired and wireless networks
	Insufficient Wi-Fi signal strength	• Check distance to router; see if a computer can connect to the network in this location • Optimize the distance of the router's location
	Unknown encryption method	Change encryption method on router. The radio supports WEP, WPA, WPA2
	Firewall preventing access	• Disable the firewall to see if radio can connect to the network. • Windows Media Player: varies non Microsoft firewalls may require configuration for UPnP.

16. Trouble Shooting

Problem	Cause	Solutions
If your radio can connect to the network successfully, but is unable to play particular stations		• The station is not broadcasting at this time of the day (remember it may be located in a different time zone). • The station has too many people trying to attach to the radio station server and the server capacity is not large enough. • The station has reached the maximum allowed number of simultaneous listeners. • The update of the link is done regularly. To get the updated list of stations, please access from Internet radio > Skytune. If case a particular stream is still not working, please contact us or Skytune to report the case.
If your radio can connect to the network successfully, but is unable to play particular stations		• The station is not broadcasting at this time of the day (remember it may be located in a different time zone). • The station has too many people trying to attach to the radio station server and the server capacity is not large enough. • The station has reached the maximum allowed number of simultaneous listeners. • The update of the link is done regularly. To get the updated list of stations, please access from Internet radio > Skytune. If case a particular stream is still not working, please contact us or Skytune to report the case.
No DAB/FM reception		• Please carry out "Factory Reset" on the radio and extend the antenna. • Move the radio close to the window.

16. Trouble Shooting

Problem	Cause	Solutions
DAB/FM Radio reception is poor		• Please check that the aerial is extended for the maximum signal strength and improved reception. • Check that you do not have other electrical equipment too close to your radio, causing interference.
No sound		• Please check if the playback is stopped. Press the OK button on the remote to resume playback. • Adjust the volume • Check if other radio stations have the same problem or just happened on a particular station. If external speaker is connected to the line out jack: • Adjust the volume level of the external powered speaker. • Please check if the power of the external powered speaker is switched on.

Helpful Tips

1. If the Internet Radio keeps re-buffering radio station:

The Internet Radio is streaming the data from the radio station via your broadband connection, if there is a high error rate on your broadband connection, or the connection is intermittent, then it will cause the Internet Radio to pause until the connection is re-established and it has received enough data to start playing again. If your Internet Radio keeps stopping, please check the modem or router to ensure that the Broadband line is not suffering a high error rate or disconnections. If you are experiencing these problems, you will need to contact your broadband supplier.

2. What is Buffering?

When playing a stream, the Internet Radio/Media player, downloads a small amount of the stream before it starts playing. This is used to fill in any gaps in the stream that may occur if the internet or the wireless network is busy. The Internet Radio streams music data from the PC while you are listening. If a stream gets blocked or experiences Internet congestion while transferring it may stop/interfere with the quality of play. If this happens, check your internet connection speed. It must be faster than the speed of the streams.

3. My Tuner is working but some stations cannot be played.

The problem may be due to one or more of the followings:

- a. The radio station is no longer broadcasting.
- b. The radio station has reached the maximum allowed number of simultaneous listeners.
- c. The radio station has changed the stream arrangement and the link is no longer valid.
- d. The radio station is not broadcasting at the time of the day (not all stations are broadcasting 24 hours throughout the day).
- e. The Internet connection between your Tuner and the radio station server is too slow or unstable to support the data rate of the broadcast.

Technical Specification

Model	A 2734A
Power input	9V $\overline{\text{---}}$ 2A
Power voltage	100-240V~50/60Hz
Wireless Network	IEEE802.11b/g/n
Wireless network frequency	2.4 GHz
Security Protocol	WEP/WPA/WPA2
Ethernet connection (LAN)	10 Mbps RJ45
BT version	V5.3
BT frequency	2.4 GHz
BT range	10 meters (line of sight)
DAB frequency range	174.928MHz (5A) - 239.200MHz (13F) Support DAB and DAB+
FM frequency range	87.5-108MHz
Audio input	USB thumb drive CD Player
Audio output	Stereo headphone jack 3.5 mm Stereo line out Optical (Toslink) and co-axial digital out (SPDIF)
Wire antenna jack	
External antenna x 2	5dBi
Unit Dimension	430 x 48 x 243mm(L x H x D) Rack installation with 1U with supplied mounting brackets.

Specifications may change without notice

In the box

- Internet Radio Tuner
- Power adaptor
- Wire antenna
- External antenna x 2 pcs
- RCA cable
- Remote control (without batteries)
- RACK x 2pcs
- Screw x 8pcs
- User manual

Recycling



Do not disposal of old or defective electric or electronic devices with household waste. Return your product to a municipal collection point for recycling to dispose of it.